

Index

Operator Symbols

-, 29
' , 24
!, 24
!, 22
", 25
#, 24
 π (pi), 198
\$, 23
&, 30
(), 29
*, 30
. (bit select operator), 25
/, 30
;, 22
@, 22
\ , 26
^, 32
|, 31
~(), 32
+, 29
<, 27
<<, 33
<=, 28
>, 28
=, 26
>, 27
>=, 27
>>, 33

A

absolute position
 absolute path (PAB), 184
 absolute positioning mode (MA1), 163
 effect on distance, 55
 establishing, 197, 209
 effect on position report, 90,
 189, 190, 191, 192, 193,
 196, 203, 256, 266, 267,
 268, 269, 270, 271, 272
 master encoder
 clear, 203
 establishing, 203
 zeroed after homing, 116
acceleration, 35
 assignment of, 36
 change on-the-fly, 51, 164
 feedforward gain, 233
 jerk calculations, 15
 maximum, follower axis, 92
 path, 183
 scaling, 17
 scaling factor (SCLA), 223, 227
 s-curve profiling, 13, 36
 homing, 117
 jogging, 138
 joystick, 142
 paths, 183
access, 130, 156
actual feedback device position. See
 position
addition (+), 29

address
 Ethernet, 265
 IP, 170
address, auto-addressing units in a
 chain, 39
advance, geared (Following), 91
alarm event
 enable checking (INTHW), 135
 force a condition (INTSW), 136
 trigger with an input, 129, 155
 trigger with timer value, 259
analog input
 ANI option. See ANI
 joystick, 144, 145, 146, 147
 voltage range, 145
 voltage range selection, 42
analog output offset (servo), 241
AND (logical operator), 40
ANI
 as Following master (ANIMAS),
 42
 check input voltage, 248
 enable (ANIEN), 41
 feedback (ANIFB), 41
 override (ANIEN), 41
 position
 assignment/comparison, 90, 185
 status, 248, 256, 266
 selected with SFB, 231, 256
 voltage
 assignment/comparison, 40
 status, 40, 248, 262
 voltage range section (ANIRNG),
 42
application examples
 continuous phase shift, 104
 Following, 95
 GOWHEN, 112
 preset phase shift, 105
 scaling setup, 19
applications help (HELP), 115
arc segment, 186, 187, 188
arc tangent, 46, 214
ASCII character designator (\), 26
ASCII Table, 307
assignment of axes to tasks, 279
assignment of master and follower,
 97
axis assigned to task (TSKAX), 279
axis moving status, 43, 167, 249
axis scaling, 16
axis status, 43, 248
axis status, extended, 45, 250, 251,
 252
axis type definition (AXSDEF), 46
axis, contouring, 189

B

backup to home (HOMBAC), 120,
 121
baud rate, establish, 47
BCD program select input, 127, 133,
 154
begin and end string ("), 25

begin comments (;), 22
begin executing a program (RUN),
 222
begin program definition (DEF), 62
beginning of transmission characters
 (BOT), 47
binary value identifier (b), 4
binary variable (VARB), 293
 clearing, 293
 display of bits, 33
 display on RP240, 73
 writing, 301
bit select operator (.), 4, 25
bitwise AND (&), 31
bitwise exclusive OR (^), 32
bitwise NOT (~), 33
bitwise OR (|), 31
Boolean And (&), 30
Boolean Exclusive Or (^), 32
Boolean Inclusive Or (|), 31
Boolean Not (~), 32
branching
 ELSE, 76
 error program, 86
 GOSUB, 110
 GOTO, 111
 IF, 122
 JUMP, 147
 NIF, 168
 NWHILE, 170
 REPEAT, 221
 UNTIL, 289
 WHILE, 299
BREAK, 48, 110
break point (BP), 47
buffered commands
 looping (begin - L), 150
 looping (end - LN), 158
 looping, compiled, 201

C

call a subroutine (GOSUB), 110
carriage return
 command delimiter, 4
 transmission character, 79
case sensitivity, 4
center position specifications, 187,
 188, 207
characters
 command delimiters, 4
 comment delimiter, 4, 22
 field separators, 4
 limit per line, 4
 neutral (spaces), 4
circular interpolation. See
 contouring
clear display (DCLEAR), 62
clear error condition, 85
clear variables (VARCLR), 293
COM port
 enable/disable (E), 75
 function, setup, 71
 lock to a task, 158
 selection (PORT), 204

commanded acceleration,
 feedforward gain, 233
 commanded direction polarity, 50
 commanded position, 196, 271
 capture, 128, 190, 267
 comparison or assignment, 189
 display, 266
 follower
 assignment/comparison, 210
 transfer, 273
 commands
 buffered, 22
 looping, 158
 looping, compiled, 201
 command buffer execution
 after end-of-travel limit
 (COMEXL), 52
 after pause/continue input
 (COMEXR), 52
 after stop (COMEXS), 53
 continuous (COMEXC), 50
 command description format, 2
 command field symbols, 3
 command list, 303
 command value substitutions, 5
 command-to-product
 compatibility, 2
 default settings, 2
 delimiters, 4
 immediate, 22
 syntax, 2
 types, 2
 comment delimiter, 4, 22
 communication interface
 addressing units in a chain, 39
 baud rate, 47
 COM port selection (PORT), 204
 controlling multiple COM ports,
 204
 send response to alternate port,
 34
 send response to both ports, 34
 echo enable, 75
 enable communication (E), 75
 Ethernet
 Ethernet address, 265
 IP address, 170
 network mask, 170
 lock COM port, 158
 RP240 check, 71
 XON/XOFF, enable & disable,
 302
 communications server, 135, 136
 compiled motion. See PLC program
 compiling (PCOMP), 194
 execute from PLC program
 (PEXE), 197
 failed PCOMP, 242, 281
 final velocity, 298
 GOBUF segments, 108
 looping, 201
 memory status, 242, 281
 outputs (POUTn command), 205
 run the profile (PRUN), 208
 status of program storage, 253
 status, free segments, 231, 278
 uncompile the profile
 (PUCOMP), 212
 compiling a profile or program
 (PCOMP), 194
 conditional branching
 ELSE, 76
 IF, 122
 NIF, 168
 NWHILE, 170
 REPEAT, 221
 UNTIL, 289
 WHILE, 299
 conditional go, 112
 continue (!C), 47, 49, 53, 150
 continuous positioning mode (MC1),
 164
 continuous shift. See shift,
 continuous
 contouring, 183
 axes, inclusion of, 189
 memory allocation, 165
 path
 absolute (PAB), 184
 acceleration (PA), 183
 acceleration, s-curve, 183
 CCW arc, origin specified,
 187
 CCW arc, radius specified,
 186
 compile (PCOMP), 194
 compile (PCOMP), failure,
 242, 281
 CW arc, origin specified, 188
 CW arc, radius specified, 188
 deceleration (PAD), 184
 deceleration, s-curve, 185
 definition (DEF/END), 63, 78
 execute from PLC program
 (PEXE), 197
 incremental (PAB), 184
 line segment definition, 200
 local coordinates (PLC), 199
 local mode (PL), 198
 memory allocation, 165
 memory status, 253
 outputs (POUT), 205
 proportional axis (PPRO), 206
 radius tolerance (PRTOL), 207
 run/execute (PRUN), 208
 s-curve accel/decel, 183, 185
 tangent axis resolution
 (PTAN), 211
 uncompile (PUCOMP), 212
 velocity (PV), 213
 work coordinates (PWC), 213
 scaling (SCLD), 18
 control characters, 300
 control signal offset, 241
 controlling multiple serial ports
 select target port (PORT), 204
 send response to alternate port, 34
 send response to both ports, 34
 coordinates, contouring
 absolute, 184
 incremental, 184
 cosine, 54, 214

D
 DAC
 limit, 57
 value
 assignment/comparison, 56
 status, 253
 damping, 237
 data
 assignment (DAT), 57
 fields, in command syntax, 3
 program (DATP), 57, 58
 program size (DATSIZ), 60
 read from the RP240, 67
 statement (DATA), 57
 memory required, 165
 storage, 57, 58, 60, 254
 teach, 61
 transfer, 181, 182
 deadband
 joystick center, 145
 joystick end, 145
 stall, 88
 debounce time for programmable
 inputs, 124
 debounce time for trigger interrupt
 inputs, 277
 debugging tools. See Programmer's
 Guide and back cover
 axis status (extended) report, 250
 axis status report, 248
 break point, 47
 break, manual, 48
 ENABLE status, 261, 262
 error messages, 9
 HALT, 115
 identify bad command, 12, 252
 single-step mode, 24, 243
 technical support, 115
 trace mode, 273, 274
 translation mode, 275
 deceleration, 37
 assignment/comparison, 38
 change on-the-fly, 51
 limits
 hard, 151
 soft, 160
 path, 184
 scaling, 17
 s-curve profiling, 13, 38
 hard limits, 151
 homing, 118
 jogging, 139
 joystick, 143
 paths, 185
 soft limits, 160
 default command settings, 2
 define
 program/subroutine/path (DEF),
 62
 user status, 125
 degrees, unit of measure, 214
 delay time (T command), 247
 delete a program/subroutine/path
 (DEL), 63
 delimiter, comment, 4, 22
 delimiters, command, 4
 digital-to-analog converter (DAC)
 voltage, 56, 57, 253
 direction polarity, commanded, 50
 disable drive, 70
 disable drive on kill, 149
 display
 messages, 25
 RP240. See RP240
 distance, 55
 assignment, 56
 change on-the-fly, 51, 55
 fractional step truncation, 19,
 228, 229

master. See master, distance registration, 218
 lock-out, 219
 scaling factor (SCLD), 223
 target zone, 244
 division, 30
 drive
 configuration
 axis definition (AXSDEF), 46
 disable drive on kill, 149
 drive fault input enable (DRFEN), 69
 fault level (DRFLVL), 70
 resolution (DRES), 69
 definition per axis (AXSDEF), 46
 disable, 70
 enable, 70
 fault, 70
 input, 45, 70, 251
 enable (DRFEN), 69
 level (DRFLVL), 70
 output, 178
 status, 45, 251, 252
 fault input enable (DRFEN), 69
 shutdown, 70, 148, 149

E

echo, communication, 75
 ELSE, 76, 122, 168
 enable input status, 80, 131, 261, 262
 error checking, 84
 error program, 85
 error status, 80, 255
 enable or disable Following, 94
 status, 102, 257
 enabling the drives, 70
 encoder
 capture/counter enable (steppers), 77
 failure detection, 76
 failure status, 45, 251
 master
 polarity, 167
 position
 assignment/comparison, 203, 272
 capture, 192, 269
 status, 272
 step & direction input, 167
 polarity, 77
 position
 assignment/comparison, 90, 196
 capture, 128, 191, 268
 error, 196
 status, 256, 271
 resolution (ERES), 81
 selected with SFB, 231
 step & direction input (ENCSD), 78
 Z-channel homing, 116, 121
 z-channel state status, 45, 251
 end of line terminating characters (EOL), 79
 end of loop (LN), 150, 158
 end of loop, compiled (PLN), 201
 end of transmission characters (EOT), 79

end program/subroutine/path definition (END), 78
 end-of-travel limits
 active level, 157
 deceleration, 151
 s-curve, 151
 effect on command buffer, 52
 effect on homing, 116, 120
 enable/disable, 150
 function assignment (INFNC), 130
 function assignment (LIMFNC), 154
 simulate activation, 153
 soft limit
 decel, 159
 deceleration, s-curve, 160
 range, negative direction, 161
 range, positive direction, 161
 status, 43, 152, 249, 264
 enter interactive data (*), 24
 erase all programs (ERASE), 81
 error
 clearing, 85
 error checking enable (ERROR), 84
 error detection level (ERLVL), 83
 program assignment (ERRORP), 85
 prompt (ERRBAD), 82
 responses, 9
 status, 80, 254, 255
 Ethernet
 Ethernet address, 265
 IP address, 170
 network mask, 170
 events, alarm, 135
 exclusive or (^), 32
 execute program from PLC program, 89
 expansion I/O, status, 262
 extended axis status, 45, 251, 252

F

factory default settings, 222
 failure of encoder, detect, 76
 fast status
 register, 136
 faults. See drive, fault. See error
 feedback source selection, 231
 ANI input (ANIFB), 41
 field separator, 4
 filter, master position, 90
 final velocity (compiled motion), 298
 follower
 acceleration, max., 92
 commanded position
 assignment/comparison, 210
 transfer, 273
 conditional go, 112
 definition of, 97
 master assignment, 97
 phase shift. See shift ratio to master, 100
 change on the fly, 101
 final (compiled motion), 101
 status, 102, 257
 velocity, max., 92
 Following
 application examples, 95
 conditions for killing a profile, 97

distance scaling, 18
 enable or disable, 94
 status, 102, 257
 geared advance, 91
 status, 102, 256, 258
 step & direction input (MESND), 167
 force an alarm event (INTSW), 136
 fractional step truncation, 228, 229

G

gains
 acceleration feedforward, 233
 gain set, display, 258, 279
 gain set, enabling, 233
 gain set, saving, 236
 integral feedback, 234, 235
 integral windup limit, 235
 proportional feedback, 235
 velocity feedback, 237
 velocity feedforward, 237
 geared advance, 91
 global command identifier (@), 4, 22
 GO, 107
 compiled (GOBUF), 108
 GOBUF, compiled motion segments, 108
 good prompt (ERROK), 84
 gosub, 110
 branch to error program, 84
 on input condition, 172
 on user status condition, 173
 on VAR1 condition, 174
 on VAR2 condition, 174
 goto, 111
 branch to error program, 84
 GOWHEN, 112
 error condition, 80, 255
 check, 85
 status, 44, 249
 via trigger input, 276
 greater than (>), 27
 greater than or equal (>=), 27

H

halt, 115
 stop error program, 85
 hard limit
 active level (LIMLVL), 157
 deceleration (LHAD), 151
 enable (LH), 150
 s-curve deceleration, 151
 status, 152, 264
 HELP, 115
 hexadecimal value identifier (h), 4
 homing
 acceleration, 117
 backup enable, 119
 deceleration, 118
 final direction, 119
 home input, 130
 home input, 156
 home input
 active level, 157
 reference edge, 120
 status, 152, 264
 initiate (HOM), 116
 s-curve accel/decel, 117, 118
 status, 43, 249

- to encoder Z-channel, 121
- velocity
 - final, 121
 - starting, 120
 - zero absolute position, 116

I

- IF, 40, 76, 122, 168
- immediate commands, 22
- immediate data read from RP240, 67
- immediate stop, 223
- in position, 137
- inclusive or (`()`), 31
- incremental positioning mode (`MAØ`), 163
 - effect on distance, 55
- indirect variables, 292
- initial master cycle position, 94
- inputs, 6
 - analog. See ANI
 - joystick. See joystick
 - joystick (INFNC functions), 129
 - joystick (LIMFNC functions), 155
- limits
 - end-of-travel. See end-of-travel
 - home. See homing, home input
- programmable
 - active level (INLVL), 131
 - alarm event, 129, 155
 - bit pattern, 6
 - configuration, 262
 - debounce time, 124
 - enable (INEN), 126
 - function assignments (INFNC), 127
 - function assignments (LIMFNC), 154
 - simulate activation of, 153
- jog
 - negative direction, 129, 155
 - positive direction, 129, 155
 - speed select, 129, 155
- kill, 128, 155
- pause/continue, 128, 155
 - effect on command buffer, 52
- position capture, 128
- program select, 130, 156
- program select, BCD, 127, 154
- registration, 214
- status, 123, 261
- stop, 128, 155, 223
- strobe time, 133
- thumbwheel, 134, 288
- trigger interrupt, 128, 190, 191, 192, 193, 267, 268, 269, 270
 - user fault, 128, 155
- trigger. See trigger inputs
- integer variable (VARI), 294
 - display on RP240, 73
 - writing (WRVARI), 301
- integral feedback gain, 234
- integral windup limit, 235
- interactive date(`()`), 24

- interrupt, program, 171, 172, 174
- IP address, 170

J

- jerk calculations, 15
- jerk, reducing, 13
- jog
 - acceleration, 138
 - s-curve, 138
 - deceleration, 138
 - s-curve, 139
 - input
 - negative direction, 129, 155
 - positive direction, 129, 155
 - speed select, 129, 155
 - mode enable (JOG), 137
 - using RP240, 63
 - velocity
 - high, 139
 - low, 140
- joystick
 - acceleration (JOYA), 142
 - analog channel high (JOYAXH), 144
 - analog channel low (JOYAXL), 144
 - center (JOYCTR), 145
 - center deadband (JOYCDB), 145
 - deceleration (JOYAD), 143
 - enable operation (JOY), 140
 - end deadband (JOYEDB), 145
 - input functions (INFNC), 129
 - input functions (LIMFNC), 155
 - s-curve accel/decel, 142, 143
 - velocity high (JOYVH), 146
 - velocity low (JOYVL), 146
 - voltage range, 145
 - zero (JOYZ), 147
- jump, 111, 147

K

- kill, 148, 149
 - conditions that will kill a
 - Following move, 97
 - disable drive, 149
 - immediate (!K), 133, 164
 - input, 128, 155
 - on stall (ESK), 88

L

- label
 - declaration (`$`), 23
 - transfer, 263
- LEDs, RP240, 65
- left-to-right math, 4
- length, master cycle, 93
- less than (`<`), 27
- less than or equal (`<=`), 28
- limits
 - activate output, 178
 - end-of-travel. See end-of-travel limits
 - function assignments (LIMFNC), 154
 - simulate activation of, 153
 - home. See homing, home input status, 152, 264
- line feed
 - command delimiter, 4
 - transmission character, 79

- line segment, contouring, 200
- linear interpolation
 - distance, 55
 - distance scaling, 18, 228
 - initiate motion (GOL), 110
 - path
 - acceleration (PA), 183
 - path
 - acceleration s-curves (PAA), 183
 - deceleration (PAD), 184
 - deceleration s-curves (PADA), 185
 - velocity (PV), 213
- local coordinate system, 184, 198, 199
- lock COM port to a task, 158
- lock-out distance, registration, 219
- logical operators
 - AND, 40
 - NOT, 169
 - OR, 175
- loops
 - compiled, 201
 - end of loop, 158
 - compiled, 201
 - nested, 150
 - terminate, 162

M

- master
 - assign an ANI input (ANIMAS), 42
 - definition of, 97
 - status, 102, 257
 - direction, status of, 102, 257
 - distance
 - fractional step truncation, 229
 - programming (FOLMD), 99
 - encoder
 - positon, 203, 272
 - captured, 192, 269
 - clear, 203
 - set, 203
 - follower assignment, 97
 - master cycle
 - counting
 - restart, 93
 - length, 93
 - master cycle number
 - assignment/comparison, 169
 - transfer, 265
 - position
 - assignment/comparison (PMAS), 202
 - capture (PCMS), 193
 - capture (TPCMS), 270
 - initial, 94
 - rollover, 202, 272
 - transfer (TPMAS), 272
 - status, 102, 257
 - master cycle position capture, 193, 270
 - master position filtering, 90
 - status, 102, 257
 - master position prediction, 101
 - status, 102, 257
 - moving, status of, 102, 257

- ratio to follower, 100
 - change on the fly, 100
 - status, 102, 257
- scaling, 18, 229
- velocity, 287, 298
- mathematical operators
 - (), 29
 - *, 30
 - /, 30
 - +, 29
 - =, 26
 - SQRT, 241
- maximum allowable position error, 240
- maximum follower acceleration, 92
- maximum follower velocity, 92
- memory
 - after a reset, 222
 - allocation, 165
 - data statement (teach mode), 165
 - labels, 23
 - locking, 130, 156
 - status, usage, 253, 264
- messages
 - display on RP240 (DWRITE), 74
 - error, 9
 - sending, 25
- motion parameters, 107
- motion, compiled. See *contouring or compiled motion*
- moving/not moving status, 43, 167, 249
- multi-line response, 79
- multiplication, 30
- multi-tasking
 - assign axes to tasks (TSKAX), 279
 - control task swapping, 280
 - identify the controlling task, 250, 284
 - lock resource to a task, 158
 - status, 283
 - task identifier (%), 4, 21
 - tasks active (status), 246, 284

N

- nested loops, 150
- network mask, 170
- neutral characters, 4
- NIF, 76, 122, 168
- not equal (<>), 28
- not, bitwise operator (~), 32
- not, logical operator (NOT), 169
- number, master cycle, 169, 265
- numeric variable, 301
 - clearing, 293
 - display on RP240, 72
- NWHILE, 170, 299

O

- offset
 - position, 197, 209
 - master encoder, 203
 - servo control signal, 241, 253
- on conditions (program interrupts), 171, 172, 173, 174
- one-shot registration, 220
- on-the-fly D changes, 51, 55
- on-the-fly FOLRD & FOLRN changes, 51, 100, 101

- on-the-fly MA & MC changes, 51, 163, 164
- on-the-fly profile change not possible, 44, 249
- on-the-fly V, A & AD changes, 51, 164
- operation priority level, 29
- operator symbols
 - ', 24
 - !, 22
 - ", 25
 - #, 24
 - \$, 23
 - &, 30
 - (), 29
 - *, 30
 - . (bit select operator), 25
 - /, 30
 - ;, 22
 - @, 22
 - \\, 26
 - ^, 32
 - |, 31
 - ~(), 32
 - +, 29
 - <, 27
 - <<, 33
 - <=, 28
 - <>, 28
 - =, 26
 - >, 27
 - >=, 27
 - >>, 33
- or, 299
 - or, Boolean exclusive (^), 32
 - or, Boolean inclusive operator (|), 31
 - or, logical operators (OR), 175
- origin specified CCW arc segment (PARCOM), 187
- origin specified CW arc segment (PARCOP), 188
- oscillation, reducing, 234
- other input status (INO), 131
- outputs, 6
 - DAC control signal limit, 56, 57
 - path (POUT), 205
 - programmable
 - activate, 175
 - activate, multiple, 177
 - active level (OUTLVL), 179
 - bit pattern, 6
 - configuration, 262
 - enable (OUTEN), 177
 - fault output, 178
 - function assignments (OUTFNC), 178
 - limit encountered, 178
 - maximum position error exceeded, 179
 - moving/not moving, 178
 - output on position, 179, 180
 - PLC, 181
 - program in progress, 178
 - stall indicator, 178
 - status, 175, 176, 177, 265
 - strobing, 181
- over-damping, 237
- override analog inputs (ANIEN), 41
- overshoot, 234, 235

P

- participating axes, contouring (PAXES), 189
- partitioning memory, 165
- password, RP240, 65
- pause active, status, 242, 281
- pause program execution (PS), 209
- pause/continue input, 128, 155
 - effect on motion & program execution, 52
- phase, shift
 - continuous, 103
 - position assignment/comparison, 210
 - position transfer, 273
 - preset, 105
- Pi (π), 198
- PLC
 - data inputs (INPLC), 132
 - inputs, 132
 - strob outputs (OUTPLC), 181
- PLC program
 - compiling (PCOMP), 194
 - defining (PLCP), 199
 - execute compiled program from (PEXE), 197
 - execute program from (EXE), 89
 - initiate scan mode (SCANP), 225
 - memory storage, 165
 - time of last scan, 278
- pointer, data
 - location, 66, 254
 - reset, 59
 - set, 58
- polarity
 - commanded direction, 50
 - drive fault input, 70
 - encoder input, 77
 - end-of-travel inputs, 157
 - home inputs, 157
 - master encoder input, 167
 - programmable inputs, 131
 - programmable outputs, 179
 - trigger inputs, 131
- PORT (selecting a COM port), 204
- position
 - absolute, establishing, 197, 209
 - actual, 196, 271
- ANI
 - assignment/comparison, 90, 185
 - status, 248, 256, 266
- capture
 - commanded, 77, 190, 267, 277, 285
 - commanded position, 128
 - encoder, 77, 128, 191, 268, 277, 285
 - master encoder, 192, 269
 - for registration, 214
 - master, 128
 - master cycle, 193, 270
 - commanded, 189, 196, 266, 271
 - captured, 190
- current feedback device, 90
- encoder, 196, 271
 - assignment/comparison, 90
 - master, 203, 272
 - status, 256

error

- exceeded max. limit, 43, 80, 249, 255
- setting max. allowable (SMPER), 240
- status, 196, 271

master cycle, 94

master encoder

- absolute, clearing, 203
- absolute, establishing, 203
- offset, 203

master position prediction. See master, master position prediction

offset, 197, 209

output on position, 180

overshoot, 235

positioning mode selection, 163, 164

- change on the fly, 163, 164

RP240 cursor (DPCUR), 65

set to zero after homing, 116

setpoint, 189, 266

shift

- continuous, 103
- geared to master, 91
- preset, 105
- set to zero upon FOLEN1, 94

tracking, 237

power-up start program (STARTP), 243

pre-emptive GOs. See on-the-fly. See on-the-fly

preset positioning mode (MCØ), 164

preset shift. See shift, preset

priority level, 29

product revision, 2, 275

profile, compiling (PCOMP), 194

program

- branch condition, 23, 110, 111, 147, 173
- break point, 47
- comments, 4
- contents, display, 272
- data (DATP), 58
- debug, 275
 - command errors, 252
- definition, 62, 78, 222
- definition, prompt (ERRDEF), 83
- directory, 253
- erase, 81
- error handling, 85
- error responses, 9
- execution
 - from compiled program (EXE), 89
 - status, 242, 256, 281
 - termination, 48, 115
 - upon power-up, 243
- flow control, 115, 147, 168, 169, 221
- interrupts, 171
- jump (branch), 147
- label, 23
- list all programs, 253
- memory allocation, 165
- name, 63, 133
- pause, 209

PLC

- definition of (PLCP), 199
- memory storage, 165

PLC scan (SCANP), 225

power-up program, 243

reset, effect of, 222

run, 222

- security, 130, 156
- selection, 130, 133, 156
- size restriction, 165
- step through, 24, 243
- storage, 165, 264
- trace mode, 273, 274
- translation mode, 275
- upload, 272

programmable inputs. See inputs, programmable

programmable outputs. See outputs, programmable

programming examples. See application examples

prompt

- error, 82
- program definition, 83

proportional axis, 189

proportional feedback gain, 235

pulse width (PULSE), 212

R

radian, 214

radius

- CCW arc segment (PARCM), 186
- center point, 207
- CW arc segment (PARCP), 188
- endpoint, 207
- error, 207
- start point, 207

ratio of follower to master, 100

- change on the fly, 100, 101
- final ratio (in compiled profile), 101
- status, 102, 257

read a value (READ), 217

read data from parallel I/O, 181

read RP240 data (DREAD), 66, 67

read RP240 function key (DREADF), 67

registration

- distance, 218
- lock-out, 219
- enable, 214
- input debounce, 277
- single-shot (REGSS), 220
- status, profile not possible, 44, 249
- status, trigger occurred, 44, 249
- trigger interrupt, 128

relational operators, 122, 221, 289, 299, 300

REPEAT, 40, 169, 221, 289

reset, 222

- controller (RESET), 222
- data pointer (DATRST), 59

resolution

- drive, 69
- encoder, 81
- path tangent axis, 211

responses

- beginning-of-transmission characters, 47
- end of line characters, 79
- end-of-transmission characters, 79
- error, 9
- send to both COM ports, 34

restart master cycle counting, 93, 276

revision level, 275

rollover of master cycle position, 202, 272

round-off error, square root, 241

RP240

- COM port setup, 71
- connection verified, 242
- connection verified, 281
- data read, 66
- data read immediate mode, 67
- display binary variable (DVARB), 73
- display integer variable (DVARI), 73
- display layout, 65, 74
- display numeric variable (DVAR), 72
- display variable, 72
- jog mode, 63
- LEDs, 65
- password, 65
- position cursor, 65, 66
- read function key, 67
- stop key enable/disable, 72
- value of key pressed, 64
- write text, 74

RS-232C

- auto-addressing (ADDR), 39
- COM port setup, 71
- enable/disable communication, 75
- lock COM port, 158

RS-485

- auto-addressing (ADDR), 39
- COM port setup, 71
- disable XON/XOFF, 302
- enable/disable communication, 75
- lock COM port, 158

run, compiled program (PRUN), 208

run, PLC program (SCANP), 225

run, program (RUN), 222

S

save command buffer on limit, 52

scaling, 16

- acceleration, 17, 227
- contouring, 18
- distance, 18, 228
- enabling, 223
- examples, 19
- master, 18, 229
- velocity, 18, 230

scan PLC program (SCANP), 225

scan time of last PLC program, 278

s-curves, 13

- acceleration, 36
- contouring
 - path acceleration, 183
 - path deceleration, 185
- deceleration, 38
- hard limit deceleration, 151
- homing acceleration, 117
- homing deceleration, 118

- jogging acceleration, 138
- jogging deceleration, 139
- joystick acceleration, 142
- joystick deceleration, 143
- linear interpolation
 - path acceleration, 183
 - path deceleration, 185
 - soft limit deceleration, 160
- security of programs, 130, 156
- segment. See contouring. See compiled motion
- select bit, 25
- servo
 - chattering, 237
 - commanded position, 189, 266
 - control signal offset, 241
- DAC
 - offset, 241
 - setting limit, 57
 - value assignment/comparison, 56
 - voltage status, 253
- data gathering, status, 242, 281
- feedback source selection, 231, 256
- gain sets
 - display, 279
 - enable, 233
 - saving, 236
- gains. See gains
- move completion criteria, 244
- over-damping, 237
- overshoot, 235
- position error, 235
 - max. allowable, 240
- position tracking, 237
- steady state position error, 235
- target distance zone, 244
- target velocity zone, 245
- target zone mode enable, 244
- target zone settling time, 284
- target zone settling timeout period, 245
- set contouring axes (PAXES), 189
- set data pointer (DATPTR), 58
- setting time. See target zone
- shift
 - continuous, 103
 - application example, 104
 - position
 - assignment/comparison, 210
 - transfer, 273
 - geared to master, 91
 - L to R (bit 1 to bit 32), 33
 - preset, 105
 - application example, 105
 - position
 - assignment/comparison, 210
 - transfer, 273
 - R to L (bit 32 to bit 1), 33
 - status, 102, 257
 - shutdown the drive, 70, 148, 149
 - sine, 238
 - sine wave (virtual master)
 - amplitude (SINAMP), 239
 - angle (SINANG), 239
 - start (SINGO), 239
 - single step mode, 24, 243
 - single-line responses, 79
 - single-shot registration (REGSS), 220
 - soft limit
 - deceleration (LSAD), 160
 - effect on command buffer, 52
 - enable (LS), 159
 - negative-direction range (LSNEG), 161
 - positive-direction range (LSPOS), 161
 - s-curve deceleration, 160
 - software revision level, 275
 - space (neutral character), 4
 - square root, 241
 - stall detect (ESTALL), 88
 - stall detect backlash deadband (ESDB), 88
 - start timer (TIMST), 260
 - start-up program (STARTP), 243
 - statistics, controller config. & status, 283
 - status
 - ANI position, 40, 248
 - axis, 43, 248
 - axis, extended, 45, 250, 251, 252
 - command error, 12, 252
 - commanded position, 189, 266
 - captured, 190, 267
 - compiled motion memory, 242, 281
 - DAC voltage, 56, 253
 - data pointer location, 66, 254
 - drive fault input, 45, 251
 - enable input, 261, 262
 - encoder
 - master position, 203, 272
 - encoder failure, 45, 251
 - encoder position, 196, 271
 - captured, 191, 268
 - error, 80, 254, 255
 - Ethernet address, 265
 - expansion I/O, 262
 - Following, 102, 256, 258
 - free segments, compiled memory, 231, 278
 - gain set, 279
 - gains, current active, 258
 - inputs, 290
 - enable, 261, 262
 - programmable, 123
 - interrupt, 290
 - labels, 263
 - limits, 152, 157, 264
 - master encoder position
 - captured, 192, 269
 - memory, 253, 264
 - moving/not moving, 167
 - outputs, 175, 176, 177, 265
 - pause, 242, 281
 - position capture, 277, 285
 - position error, 196, 271
 - program contents, 272
 - program directory, 253
 - program execution, 242, 256, 281
 - settling time, 284
 - software revision level, 275
 - system, 241, 281, 282, 290
 - timer, 285
 - user, 124, 286, 290
 - velocity
 - feedback device, 287
 - motor, 286
 - voltage input for ANI, 248
 - wait, 242, 281
 - z-channel state, 45, 251
 - steady state position error, 235
 - step & direction from encoder (ENCSDN), 78
 - step & direction from master encoder (MESND), 167
 - step through a program, 24, 243
 - stop
 - command, 223
 - effect on program execution, 53
 - input (INFNCi-D), 53, 128, 223
 - input (LIMFNCi-D), 155
 - stop key (RP240), 72
 - stop timer (TIMSTP), 260
 - string variable (VARS), 25, 295, 302
 - clearing, 293
 - strobe
 - PLC, 181
 - thumbwheels, 182
 - time, 133
 - subroutine
 - branch condition, 173
 - definition, 62, 78
 - effect of reset, 222
 - name, 63
 - substitutions, command values, 5
 - binary variable (VARB), 293
 - data assignment (DAT), 57
 - numeric data read (READ), 217
 - numeric variable (VAR), 292
 - RP240 Function Key (DREADF), 67
 - RP240 numeric data (DREAD), 66
 - thumbwheel data (TW), 288
 - subtraction, 29
 - support, technical assistance, 115
 - swapping, tasks
 - controlling, 280
 - status, 246, 284
 - syntax, 2, 3
 - guidelines, 4
 - system status (SS), 241

T

 - tangent (TAN), 247
 - tangent axis, 189
 - target zone, 43, 249
 - display actual settling time, 284
 - enabling, 244
 - setting the distance zone, 244
 - setting the timeout period, 245
 - setting the velocity zone, 245
 - timeout, 44, 249
 - task supervisor, 21
 - tasks. See multi-tasking
 - direct with prefix (%), 21
 - teach mode
 - data assignment (DAT), 57
 - data pointer (DATPTR), 58
 - data pointer reset (DATRST), 59
 - data program (DATP), 58
 - data program size (DATSIZ), 60
 - data statement (DATA), 57
 - data storage (DATTCH), 61
 - memory requirement, 165
 - technical support, 115
 - terminate loop (LX), 162
 - terminate program execution, 48, 85, 115

thumbwheel
 assignment (TW), 288
 data inputs (INSTW), 134
 strobe outputs (OUTTW), 182
 time delay (T), 247
 timeout, target zone, 44, 249
 timer, 285
 assignment of value (TIM), 259
 start, 260
 stop, 260
 value to cause alarm (TIMINT), 259
 trace mode, 273, 274
 transfer
 analog input voltage, ANI (TANI), 248
 axis status (TAS), 248
 axis status, extended (TASX), 250, 251, 252
 captured commanded position (TPCC), 267
 captured master cycle position (TPCMS), 270
 command error, 252
 commanded position of follower (TPSLV), 273
 current actual velocity (TVELA), 287
 current commanded velocity (TVEL), 286
 DAC voltage, 253
 data pointer location (TDPTR), 254
 error status (TER), 254, 255
 Ethernet address (TNTMAC), 265
 expansion I/O configuration (TIO), 262
 Following status (TFS), 256, 258
 free segments (TSEG), 278
 input status programmable (TIN), 261
 labels (TLABEL), 263
 limits (TLIM), 264
 master cycle number (TNMCY), 265
 master cycle position (TPMAS), 272
 master velocity (TVMAS), 287
 memory usage (TMEM), 264
 net position shift (TPSHF), 273
 other input status (TINO), 261, 262
 output status (TOUT), 265
 PLC scan time, 278
 position commanded (TPC), 266
 position error (TPER), 271
 position of ANI inputs (TPANI), 266
 position of captured encoder (TPCE), 268
 position of captured master encoder (TPCME), 269
 position of encoder (TPE), 271
 position of master encoder (TPME), 272
 position of selected feedback device (TFB), 256
 program (TPROG), 272
 program directory (TDIR), 253

program execution status (TEX), 256
 revision level (TREV), 275
 servo gain set (TSGSET), 279
 servo gains (TGAIN), 258
 servo settling time (TSTLT), 284
 statistics (TSTAT), 283
 system status (TSS), 281, 282
 timer (TTIM), 285
 user status (TUS), 286
 translation mode, 275
 transmitting message strings, 300
 trigger inputs
 active level, 131
 debounce, 124
 if interrupt inputs, 277
 I/O bit pattern, 6
 position capture, 128, 190, 191, 192, 193, 267, 269, 270
 status, 277, 285
 programmed
 GOWHEN function, 276
 restart master cycle counting, 276
 status, 102, 257
 programmed functions, 127, 154
 registration, 128, 214, 218
 status, 123, 261
 trigonometric operators, 198, 214, 238, 292
 troubleshooting. See Programmer's Guide
 axis status, 248
 axis status, extended, 250
 controller statistics, 283
 enable input status, 261, 262
 error messages, 9
 Following status, 256, 258
 identify bad command, 12
 system status, 241
 technical support, 115
 truncation
 acceleration/deceleration, 17, 227
 distance, 19, 228, 229
 velocity, 18, 230

U

uncompile a compiled profile (PUCOMP), 212
 unconditional looping, 150, 158
 compiled, 201
 units of measurement, 2, 16, 224
 UNTIL, 40, 169, 221, 289
 user fault, 128, 155, 178
 user status, 124, 286, 290
 basis for gosub, 173
 definition (INDUST), 125

V

value substitution, command fields, 5
 variables, 24
 binary, 290
 display on RP240, 73
 writing, 301
 clearing (VARCLR), 293
 conversion between numeric and
 binary, 296
 indirect, 292
 integer, 294

display on RP240, 73
 writing, 301
 numeric, 292
 display on RP240, 72
 teach data, 57, 62
 writing, 301
 string, 295
 writing, 302
 velocity, 290
 assignment, 291
 actual, 297
 commanded, 296
 change on-the-fly, 51, 164
 feedback gain (SGV), 237
 feedforward gain (SGVF), 237
 final (compiled motion), 298
 jog, high, 139
 jog, low, 140
 master
 assignment/comparison, 298
 transfer, 287
 maximum, based on pulse width, 212
 maximum, follower axis (steppers), 92
 scaling (SCLV), 223, 230
 target zone, 245
 voltage
 ANI input, 40, 248
 DAC voltage, 56, 253
 offset (servo), 241, 253
 voltage range for ANI inputs, 42

W

WAIT, 40, 169, 299
 compared to GOWHEN, 113
 status, 242, 281
 WHILE, 40, 169, 170, 299
 windup, integral gain, 235
 work coordinate system, 184, 198, 213
 write, 25, 300
 binary variable, 301
 integer variable, 301
 message, 300
 numeric variable, 301
 RP240 text, 74
 string variable, 302

X

x-center point, 187, 188
 x-coordinate, 199, 213
 x-endpoint, 186, 187, 188, 200
 XON/XOFF, enable & disable, 302

Y

y-center point, 187, 188
 y-coordinate, 199, 213
 y-endpoint, 186, 187, 188, 200

Z

z-channel, 121
 zero absolute position after homing, 116
 zero master cycle position, 94