
Index

- AC supply connections 24
- Bit switch adjustment 26
- Bit switch function 5
- Bit switch settings for test 9
- Bit switch setup 40
- Cabinet installation 23
- Cable length 22
- Cable routing 24
- Cables routed through bulkheads 24
- Commutation 39
- Commutation LEDs 4, 40
- Connector identification 14
- Control signal connections 25
- Current limit LED 3, 36
- Current limit output 16
- Damping potentiometer 5
- Determining the phase 40
- Drive dimensions 13
- Drive fault LED 4, 37
- Earth leakage current 25
- Electrostatic precautions 13
- Encoder pull up voltage 41
- Encoder resolution 41
- Encoder setup 39
- Environment 13
- Fault LED 4
- Feedback connector fault 37
- Ferrite absorber 24
- Flash testing 25
- Fuses 32
- Hall effect encoder 39
- HT LED 3
- Humidity limits 13
- HV present LED 4, 36
- Incremental encoder inputs 21
- Integral action potentiometer 4
- It foldback LED 3, 36
- LEDs 3
- MD3450/3475 Dimensions 30
- Motor cables extending 22
- Motor cables voltage rating 22
- Motor connections 21
- Motor connections re-wiring 22
- Motor connector 22
- Motor IP rating 30
- Motor peak currents 42
- Motor pole number 40
- Motor safety earth 25
- Motor selection 30
- Operating duty cycle 3
- Overspeed fault 37
- Overtemperature LED 3, 37
- Overvoltage condition 37
- Positioner (external) 26
- Potentiometer settings for test 9
- Product description 1
- Product features 2
- Proportional gain potentiometer 5
- Protection circuits 2

44 BDS-E SERVO DRIVES USER GUIDE

Radial loads 32

Reset input 16

Reset input polarity 42

Reset supplies 16

Ship kit 7

Tach input 21

Temperature of operation 13

Test configuration (pre-installation) 8

Testing the BDS 9

Thermistor transition resistance 21

Torque curves 31

Voltage withstand tests 25