

Symbols

“—Quote 186
38, 209
^H—Delete 169

A

Acceleration 153
Accessories 17
Actual Position 42
Additional Circuit Board 10
Address 209
Ambient Temperature 23
Angular Misalignment 27
Average Power 104
Average Power Calculations 120

B

Battery Backed RAM 42
Block Diagram 10
Blocking Diode 132
Brushed Motor, connecting 31
Buffer Status 153

C

Cable Length 41
Carriage Return 162
CE Marking Directive 4
Checksum 200
Choosing OEM670X vs. OEM675X 16
Color Code 30, 63
Command Mnemonic 151
Command Type 151
Commanded Current 72
Commanded Position 42
Commutation and Hall States 99
Commutation Chart 62

Connecting a Power Supply 41
Connecting Brushed Motors 31
Copper Losses 105
Couplings 27
Cover—How to Remove 18
Current Feedback Loop 71
Current Foldback 80
 foldback current 83
 peak current 83
 resistor selection 85
 time constant 83
Current Monitor 46
Current Probe 119
Cycle Power—definition 65

D

Daisy Chain 209
Debugging 139
Default Setting 152
Derivative Gain 44, 154, 158
Derivative Sampling Period 44, 157
Dimensions
 motors 59
 OEM-HS1 Heatsink 24
 OEM670X/675X 22
Direction 170
Disable Communications 167
Disabling the Drive 37
Distance 163
Double-Flex Coupling 28
Drive Dimensions 22

E

Electrical Noise 41, 145
Electromagnetic Compatibility Directive
 4
Emergency Stop 36
Enable Communications 166

Index • OEM670X/675X

Enclosure Installation 149
Encoder
 specifications 62
Encoder Inputs 37
Encoder Resolution 166
End Float 27
End of Loop 173, 178
End-of-Travel Limits
 34, 174, 188, 196
Error Signal 13, 72
Error Window 48
Eurorack Card 9

F

Fault Output 35
Fault Table 136
Filter Time Constant 163
Foldback. *See* Current Foldback
Foldback Resistors 18, 87
Friction 115

G

General Purpose Inputs 33
Go 167, 171
Go Home 168, 181, 190
Gravity 117
Grounding 31

H

Hall Effect 92
Hall Effect Sensors 93
 inside brushless motors 94
Hall Effect Specifications 62
Hall States 96
Heatplate 23
Heatsink Dimensions 24
Heatsink OEM-HS1 24
Heatsink Temperature 23, 70
Home Limit 33, 168, 171, 182, 183
Homing Function Set-ups 180

I

In Position Window 48
 output #1 on In Position 195
 position criteria 159
 time criteria 161

Inductance Range of Motors 71
Input Functions 170
Input Status 172
Input Voltage Range 40
Installation Steps 17
Integral Gain 44, 154, 155, 160
Integral Limit 45, 155, 160

K

Kill 171, 172

L

Latched—definition 65
LED Fault Table 136
Limit Disable 174
Limits 34
Linear Power Supply 129
Loop 173, 178, 189, 208
Low Voltage Directive 4
LVD installation 4, 147

M

Maximum Temperature 23
Maximum Wire Size 29
Mechanical Brake 37
Mechanical Problems 144
Misalignment & Couplers 27
Mode Continuous 175
Mode Normal 176
Mode Position Absolute 176
Mode Position Incremental 177
Motor
 color code 30
 commutation chart 62
 dimensions 59
 grounding 31
 heatsinking 26
 inductance range 71
 part number 49
 specifications 52
 speed/torque curves 57
 wiring information 63
Motor Inductance—explained 73

O

- OEM070 Servo Controller 15
- OEM300 Power Module 133
- OEM670SD/675SD Description 14
- OEM670T/675T Description 9
- OEM670X/675X Block Diagram 10
- OEM670X/675X Description 10
- OFF 178
- ON 179
- Optimum Response 77
- Outputs 34, 179
- Overdamped Response 76
- Overtemperature
 - description 70
 - troubleshooting procedure 142
- Overvoltage
 - description 68
 - troubleshooting procedure 142

P

- Panel Layout 23
- Parallel Misalignment 27
- Pause 158, 184, 189, 199, 204
- Peak Power 104
- Peak Power Curves 112
- PID Tuning 42
- Position 42
- Position, actual 164
- Position Command 11
- Position Error 48, 156, 161, 165
- Position Report 183
- Position Reset 185
- Position Servo Drive 10
- Power Curves 112
- Power Supply
 - connections 41
 - grounding 41
 - voltage range 40
 - wire size 41
- Power Supply Selection
 - calculation method 104
 - empirical method 118
 - graphical method 110
 - measurement method 118
- Power-Up 205
- Power-Up Sequence 202

- Proportional Gain 43, 156, 162
- Proportional Integral Derivative 42
- Protective Conductor Terminal 147
- Protective Earth Connection 147

R

- Regeneration
 - and linear power supply 131
 - and switching power supply 132
- Regeneration Charts 124
- Remove Cover 18
- Report Servo Errors 192
- Reset 209
- Resistor Selection 20
- Resonance Issues 28
- Response Resistor 18, 71
 - selection 77
- Return Servo Gains (to factory settings) 190
- Revision Level 193
- Rigid Coupling 28
- Rotation Direction 32
- RS-232C 36, 195
 - daisy chaining 209
- RS-232C Problems 139
- Run a Sequence 203

S

- Sampling Period 157
- Saving Tuning Settings 42
- Scanning Inputs 194
- Screw Terminal 29
- Selecting Resistors 20
- Sequence Definition 201
- Sequence Erase 201
- Sequence Select Inputs 202
- Sequence Termination 207
- Sequence Upload 207
- Sequences 171, 200
- Servo Controller 15
- Shaft Power 106
- Shielded Motor Cables 31
- Short Circuit
 - description 65
 - troubleshooting procedure 141
- Shutdown 189, 197
- Single-Flex Coupling 28

Index • OEM670X/675X

Six State Commutation 96
Software Switch Function Status 194
Specifications
 encoder 62
 Hall effect 62
 motor 52
 OEM670X/675X 50
Speed/Torque Curve, and Voltage 129
Speed/Torque Curves 57
Status 187, 188, 189, 190, 205, 206
Step & Direction Servo Drive 14
Step Response 46
Stop 171, 193, 196
Supply Voltage Range 40
Switching Power Supply 131

T

Target Position 42
Temperature Guidelines 23
10-pin Screw Terminal 29
Thermal Time Constant 83
3U Eurorack 9
Time Delay 198
Transient Undervoltage 67
Trial and Error Method 102
Triggers 170, 189, 198
Troubleshooting 135
Troubleshooting Table 137
Tuning 42

U

Underdamped Response 75
Undervoltage
 description 67
 troubleshooting procedure 142
User Guides 17

V

Velocity 200
Velocity Streaming Mode 186, 191
Voltage, and Speed/Torque Curves 129
Voltage Range
 power supply 40

W

Wire Size 41
Wiring Information 63

Z

Z channel 182