

# Compumotor

## AX Drive User Guide

Compumotor Division  
Parker Hannifin Corporation  
p/n 88-006938-03 E



## Table of Contents

<b>CONTENTS</b> .....	<b>I</b>
Table of Contents.....	i
List Of Figures.....	iv
List Of Tables.....	v
How To Use This Manual.....	vi
Assumptions.....	vi
Contents of This Manual.....	vi
Installation Process Overview.....	vii
Developing Your Application.....	vii
Installation Recommendation.....	viii
Key Terms.....	viii
Conventions.....	x
Highlighted Text.....	x
Warnings (Personal Injury) & Cautions (System Damage).....	xi
Levels.....	xi
Related Publications.....	xi
<b>Chapter 1. INTRODUCTION</b> .....	<b>1</b>
Chapter Objective.....	1
Product Description.....	1
Product Features.....	2
Theory of Operation.....	3
<b>Chapter 2. GETTING STARTED</b> .....	<b>5</b>
Chapter Objectives.....	5
What You Should Have.....	5
Ship Kit Table.....	5
Basic System Configuration.....	6
Installation Label.....	6
Setting Drive Functions.....	6
Basic System Wiring Diagram.....	8
Transformer Connections (Optional).....	9
Motor Connections.....	10
Power Connections.....	10
Establish Communications.....	11
Powering up the System.....	12
Deactivate Limit Inputs.....	12
Testing the System.....	13
<b>Chapter 3. INSTALLATION</b> .....	<b>15</b>
Chapter Objectives.....	15
Complete System Configuration.....	15
Setting Drive Output Current.....	16
Setting Indexer Address.....	16
Environmental Considerations.....	17
System Mounting.....	17
Motor Mounting.....	17
Drive Mounting.....	18
Encoder Mounting.....	20

System Connections .....	21
Wiring Guidelines.....	21
System Pinouts.....	23
Extending Motor Cables.....	24
Transformer Connections (Optional) .....	24
Power Connections.....	24
Fan Connections.....	24
Encoder Connections.....	25
RS-232C Connections.....	26
Daisy-Chain Connections.....	26
I/O Connections .....	27
Verifying Proper Installation.....	31
Verifying RS-232 Link.....	31
Open-Loop Moves .....	32
Closed-Loop Moves .....	35
Inputs & Outputs.....	39
Coupling the Load.....	41
<b>Chapter 4. APPLICATION DESIGN.....</b>	<b>43</b>
Chapter Objectives.....	43
Motion Control Concepts .....	43
Move Profiles .....	43
Move Times.....	45
Incremental vs. Absolute Positioning Modes .....	46
Positional Accuracy vs. Repeatability.....	48
Application Considerations.....	49
Mechanical Resonance.....	49
Ringing or Overshoot.....	49
Modes of Operation.....	50
Open Loop Operation.....	50
Closed Loop Operation.....	54
Program Control .....	61
Triggers .....	61
Delays.....	61
Loops.....	62
POBs (Programmable Output Bits).....	63
Move Completion Signal .....	63
Sequences.....	64
Stand-alone Operation.....	66
Host Computer Operation .....	68
PLC Operation .....	74
Model 72 (Thumbwheel) Operation.....	76
Tuning Procedure .....	76
<b>Chapter 5. SOFTWARE REFERENCE.....</b>	<b>81</b>
Chapter Objectives.....	81
Command Descriptions.....	81
Command Listing.....	84

<b>Chapter 6. HARDWARE REFERENCE.....</b>	<b>165</b>
Chapter Objectives.....	165
Environmental Specifications.....	165
System Specifications.....	166
AX Drive Specifications.....	166
Motor Specifications (Compumotor-Supplied).....	167
Inputs and Outputs.....	168
Non-Compumotor Motor Connections.....	174
Determining The 4-Lead Wiring Configuration.....	174
Determining The 6-Lead Wiring Configuration.....	174
Determining The 8-Lead Wiring Configuration.....	175
Terminal Connections.....	176
Factory Default DIP Switch Settings.....	177
Current Settings.....	177
Address Settings.....	178
Dimensional Drawings.....	179
AX Drive and Fan Dimensions.....	179
Motor Dimensions.....	180
Torque/Speed Curves.....	185
Special Motor Wiring.....	187
Wiring The 106-205 Motor.....	187
Wiring The 106-178 Motor.....	188
 <b>Chapter 7. MAINTENANCE &amp; TROUBLESHOOTING.....</b>	 <b>189</b>
Chapter Objectives.....	189
Maintenance.....	189
Spare Parts Table.....	189
Motor Maintenance.....	190
Drive Maintenance.....	190
Troubleshooting.....	190
Reducing Electrical Noise.....	194
RS-232C Communications Troubleshooting.....	199
Returning The System.....	200
 <b>APPENDICES.....</b>	 <b>201</b>
Command Listing.....	201
ASCII Table.....	203
 Glossary.....	 205
Index.....	209

## List Of Figures

Figure 1-1.	AX Drive System Functional Block Diagram.....	3
Figure 2-1.	DIP Switch Location.....	6
Figure 2-2.	System Wiring Diagram.....	8
Figure 2-3.	Transformer Connections (Optional) .....	9
Figure 2-4.	RS-232C Interface Connections.....	12
Figure 3-1.	DIP Switch Location.....	15
Figure 3-2.	Panel Layout Guidelines .....	19
Figure 3-3.	Minimum-Width Panel Mount .....	19
Figure 3-4.	Minimum-Depth Panel Mount .....	20
Figure 3-5.	Mounting the Encoder to the Motor .....	21
Figure 3-6.	AX Drive Pinouts.....	23
Figure 3-7.	Encoder Connection Diagram.....	25
Figure 3-8.	Encoder Input Circuit .....	26
Figure 3-9.	Daisy-Chaining AX Drives .....	26
Figure 3-10.	I/O Wiring Diagram.....	27
Figure 3-11.	Typical I/O Circuits.....	27
Figure 3-12.	Current Boost Circuits.....	30
Figure 3-13.	Output Connections.....	30
Figure 4-1.	Triangular Profile.....	44
Figure 4-2.	Trapezoidal Profile.....	44
Figure 4-3.	S-Curve Profile.....	45
Figure 4-4.	PLC Connections.....	74
Figure 4-5.	AX DIP Switch and Tuning Pot Locations.....	79
Figure 5-1.	Command Example.....	81
Figure 6-1.	AX Drive Pinouts and Connectors .....	168
Figure 6-2.	Optical Isolation Circuit .....	171
Figure 6-3.	I/O Wiring Diagram (Testing Only).....	172
Figure 6-4.	Encoder I/O Wiring Diagram.....	172
Figure 6-5.	AX Encoder Connector I/O Circuit Diagram .....	173
Figure 6-6.	Motor Wiring Diagram (Non-Compumotor Motors).....	176
Figure 6-7.	AX Dimensional Drawing.....	179
Figure 6-8.	NEMA Size 23 Motor Dimensions .....	180
Figure 6-9.	NEMA Size 34 Motor Dimensions .....	181
Figure 6-10.	NEMA Size 42 (AX 106-120) Motor Dimensions.....	182
Figure 6-11.	NEMA Size 42 (AX 106-178) Motor Dimensions.....	183
Figure 6-12.	NEMA Size 42 (AX 106-205) Motor Dimensions.....	184
Figure 6-13.	Wiring Diagram, 106-205 Motor.....	187
Figure 6-14.	Wiring Diagram, 106-178 Motor.....	188
Figure 7-1.	Noise Suppression Devices .....	194

---

## List Of Tables

Table 2-1. Ship Kit.....	5
Table 2-2. Compumotor-Supplied Motors.....	5
Table 2-3. Motor Current Settings for Compumotor-Supplied Motors.....	7
Table 3-1. DIP Switch Functions.....	16
Table 3-2. Valid AX Address Settings .....	16
Table 3-3. Environmental Specifications.....	17
Table 3-4. Extended Motor Cables.....	24
Table 3-5. Motor Wire Resistance Values.....	24
Table 4-1. Motor-to-encoder Ratios.....	54
Table 4-2. Sequence Select Inputs.....	66
Table 4-3. AX Waveform Settings.....	80
Table 6-1. AX Environmental Specifications.....	165
Table 6-2. AX Drive Specifications.....	166
Table 6-3. Compumotor-Supplied Motor Specifications.....	167
Table 6-4. Encoder Pinout.....	169
Table 6-5. Interface and I/O Specifications .....	170
Table 6-6. Encoder I/O Specifications.....	170
Table 6-7. Sequence Selection Table .....	171
Table 6-8. Dip Switch Functions.....	177
Table 6-9. Current Settings for Compumotor-Supplied Motors.....	177
Table 6-10. Motor Current Settings (Full Range).....	178
Table 6-11. Device Address Settings .....	178
Table 6-12. AX 106-205 Motor Wiring.....	187
Table 6-13. AX 106-178 Motor Wiring.....	188
Table 7-1. Recommended Spare Parts for the AX System.....	189