


Compumotor

OEM300 Power Module User Guide



Compumotor Division
Parker Hannifin Corporation
p/n 88-013513-01 C

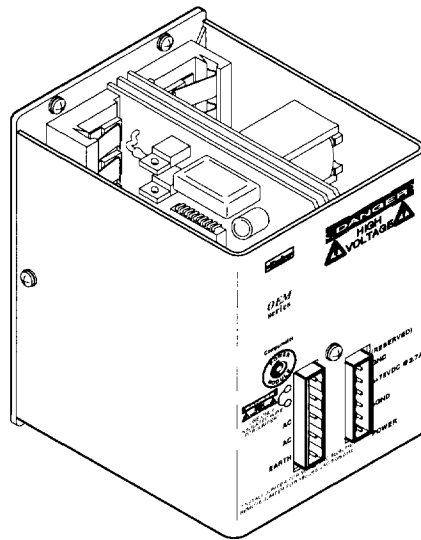

Important User Information

Installation & Operation of Compumotor Equipment

It is important that Compumotor motion control equipment is installed and operated in such a way that all applicable safety requirements are met. It is your responsibility as a user to ensure that you identify the relevant standards and comply with them. Failure to do so may result in damage to equipment and personal injury. In particular, you should review the contents of the user guide carefully before installing or operating the equipment.

Under no circumstances will the suppliers of the equipment be liable for any incidental, consequential, or special damages of any kind whatsoever, including but not limited to lost profits arising from or in any way associated with the use of the equipment or this user guide.


Safety Warning

High-performance motion control equipment is capable of producing rapid movement and very high forces. Unexpected motion may occur especially during the development of controller programs. KEEP CLEAR of any machinery driven by stepper or servo motors and never touch them while they are in operation.

High voltages exist within enclosed units, on rack system backplanes, and on transformer terminals. KEEP CLEAR of these areas when power is applied to the equipment.

Parker Compumotor constantly strives to improve all of its products. We reserve the right to modify equipment and user guides without prior notice. No part of this user guide may be reproduced in any form without prior consent from Parker Compumotor.

Compumotor

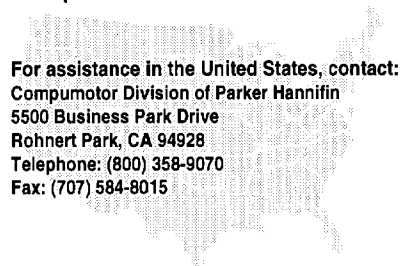

For assistance in the United States, contact:
Compumotor Division of Parker Hannifin
5500 Business Park Drive
Rohnert Park, CA 94928
Telephone: (800) 358-9070
Fax: (707) 584-8015



For assistance in Europe, contact:
Parker Digiplan
21 Balena Close
Poole, Dorset
England BH17 7DX
Telephone: 0202-690911
Fax: 0202-600820



88-013513-01 C

OEM300 Power Module User Guide

Revision C Change Summary

The following is a summary of the primary technical changes to this user guide since the last version was released. This user guide, p/n 88-013513-01 **C** (released on January 3, 1995), supersedes 88-013513-01 **B**.

JUMPER SELECTABLE AC INPUT VOLTAGE RANGE (PG. 11)

The OEM300 Power Module AC power input circuitry is no longer auto-ranging. A jumper on the AC power connector will now configure the OEM300 for 120VAC or 240VAC operation, as follows:

120VAC Operation – Jumper must be installed

240VAC Operation – Jumper must be removed

The OEM300 ships from the factory pre-configured for 120VAC operation, with a jumper installed on the connector. You must remove the jumper if you operate the OEM300 at 240VAC.

SYSTEM SIZING (PG. 45)

Chapter 6 explains how to determine how many step motor drives you can connect to one OEM300. A reference has been added to *Chapter 6* that says similar information about servo motor drives can be found in Compumotor's *OEM670T Torque Servo Drive User Guide*.

C O N T E N T S

PREFACE	IV
① Introduction	1
DESIGN INTENTIONS	1
Compumotor's OEM Series: A Family of Motion Control Products	1
Original Equipment Manufacturers Decide How to Use OEM Products	1
OEM300 POWER MODULE FEATURES	2
PROTECTIVE CIRCUITS	3
SPECIAL DESIGN ISSUES	3
Cooling the OEM300 Power Module	4
How Many Drives can the OEM300 Operate?	4
② Installation & Operation	5
BEFORE YOU BEGIN	5
OEM300 SHIP KIT	6
BENCH TEST	6
INSTALLATION	7
Mounting	7
AC Power Connection	11
DC Output Connection	13
Output Power Cable Length	14
Grounding for Safety	15
How Many Drives Can Be Connected to One OEM300?	16
Connecting Multiple Drives to the OEM300	16
Using More than One OEM300 Power Module	17
Electrical Noise Control	17
OPERATION	19
③ OEM300 Specifications	21
AC INPUT SPECIFICATIONS	21
Input Voltage	21
Input Filter	21
Inrush Current	22
DC OUTPUT SPECIFICATIONS	22
Output Voltage	22
Output Current	22
Output Power	22
Output Grounds	22
Voltage Regulation	22
Efficiency	22

Over-Temperature Protection	23
Power Dump	23
Short Circuit Protection	23
Overvoltage Protection	23
OPERATING TEMPERATURES	24
Maximum Ambient: Still Air	24
Maximum Ambient: Moving Air	24
Maximum Heatplate Temperature	24
Minimum Ambient Temperature	24
④ Protective Circuits in the OEM300	25
SHORT CIRCUIT PROTECTION	25
OVER-TEMPERATURE PROTECTION	27
Trip Temperature	27
Hysteresis	27
POWER DUMP	28
OVERVOLTAGE PROTECTION	31
⑤ Heat & Thermal Management Issues	33
HEAT MUST BE REMOVED FROM THE OEM300	33
HEATPLATE COOLING	33
Heatplate Temperature Limit	34
Heatsink Calculations	35
Heatsink Problems	35
CONVECTION COOLING	36
Ambient Air Temperature Limits	37
Providing Additional Ventilation	37
OVER-TEMPERATURE PROTECTION	38
⑥ Calculating How Many Drives & Motors The OEM300 Can Operate	39
GENERAL GUIDELINES – STEP MOTOR SYSTEMS	39
WORST-CASE METHOD	40
CALCULATION METHOD	41
Where Power is Used in a Motion Control System	41
Power Requirements During a Typical Move	45
Calculating the Power Required	47
A Design Example	48
Unusual Power Requirements	52
MEASUREMENT METHOD	53
⑦ Troubleshooting	57
POSSIBLE PROBLEMS	57
RETURNING THE OEM300 TO COMPUMOTOR	59
INDEX	61

P R E F A C E

MAYBE YOU SHOULDN'T READ THIS MANUAL!

Perhaps you are wondering, "How hard can it be to operate this Power Module? Why do I need a manual? Can't I just hook up AC power, plug in some output cables, and power up my system?"

You may be right! If you have experience designing motion control systems, then perhaps the only information you need can be found in *Chapter 2 Installation & Operation*. You may already know how to cool power supplies. You will have calculated the power your system requires, and you will connect the right number of drives to the Power Module. You will know about the hazards of load regeneration, and improper equipment grounding. And, you will probably take the proper steps to ensure electrical noise is not a problem in your system. So, if you are confident in your preparations, go ahead and plug away! And best of luck with the OEM300!

The rest of the information in this manual gives details about the issues mentioned above. Special benefits of using the OEM300 are also discussed, such as the protective circuits that guard equipment from damage by short circuits, load regeneration, or high temperatures. A troubleshooting section will help you locate problems. So, browse through the manual; you might find other topics of interest, too!

FOR THOSE WHO NEVER READ MANUALS

At least look at the next illustration. We have attempted to put all the critical information you need in this drawing. It is also shown on the back cover. Use it for quick reference. Consult the rest of the manual for detailed information.

OEM300 POWER MODULE

The OEM300 is *NOT* a general purpose power supply. Use it only with Compumotor OEM Series Microstepping or Servo Drives.

WARNING
NO USER SERVICEABLE PARTS INSIDE
 The OEM300 contains potentially lethal voltages! Do not attempt to repair it. Return the OEM300 to Compumotor for repairs.

HEATSINK

Attach Power Module's heatplate to a heatsink or heat sinking surface

HEATPLATE COOLING

- You must provide a Thermal Interface to cool the heatplate
- Use silicone thermal joint compound or thermal gasket
- Maximum Temp 60°C (140°F)

AMBIENT AIR COOLING

- Keep 2" clearance around top, bottom, and sides
- AIR TEMP LIMITS:**
- STILL AIR:
35°C (95°F) @ 200W
40°C (104°F) @ 170W
 - MOVING AIR
45°C (113°F) @ 200W
50°C (122°F) @ 170W

INPUT POWER

- 90-132VAC with Jumper Installed
 - 180-265VAC with Jumper Removed
 - **DO NOT USE 132-180VAC**
- INPUT CONNECTOR:**
- 5 Pin Removable Connector
 - 16 AWG Recommended

You must connect the EARTH terminal to EARTH GROUND!
 (Chassis, cover, EARTH, GND pins are connected internally)


OUTPUT POWER

- 75VDC ± 5%
 - 2.7A/200W Continuous
 - 4.0A/300W Peak (30 sec., 10% Duty Cycle at Peak)
 - Two 75VDC pins, internally connected
- OUTPUT CONNECTOR:**
- 6 Pin Removable Connector
 - Use 16 AWG if < 10 ft., 14 AWG if > 10 ft.

DO NOT CONNECT MULTIPLE OEM300s IN PARALLEL! They will not share the load.

PROTECTIVE CIRCUITS

- SHORT CIRCUIT PROTECTION — Latched
- POWER DUMP — Turns on at 85VDC
- OVER-TEMPERATURE — Unit shuts down @ 60°C; Latched; Cool to 30°C
- OVERVOLTAGE — Shuts down output after 0.5 sec overvoltage; Latched

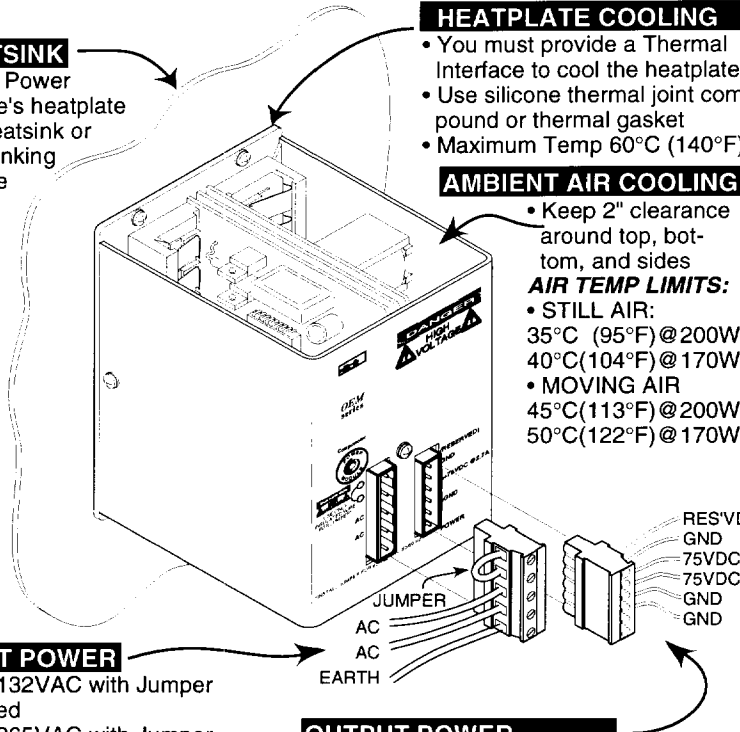

WARNINGS & CAUTIONS

Warning and caution notes alert you to problems that may occur if you do not follow the instructions correctly. Situations that may cause bodily injury are presented as warnings.

WARNING

NO USER SERVICEABLE PARTS INSIDE THE OEM300!
The OEM300 contains potentially lethal voltages. Do not attempt to repair it.
Return it to Compumotor for any repairs.

Situations that may cause system damage are presented as cautions.

CAUTION

Do not use AC input voltage in the range of 132-180VAC. AC voltage in this range can cause excessive voltages to be generated within the OEM300, and may damage the unit.
